August®

August International Ltd
United Kingdom
Telephone:+44 (0) 845 250 0586
www.augustint.com

August® User Manual

DTV700B

7 Inch Digital TV & Media Player

TV NUMERIQUE 7 POUCES et LECTEUR DE MEDIA

7 ZOLL DIGITAL TV & MEDIA PLAYER

TV DIGITALE 7 POLLICI & LETTORE MULTIMEDIALE

TV DIGITAL 7 PULGADA y LECTOR DE MEDIA

User Manual

Thank you for buying our August TV. You may already be familiar with using a similar product but please take time to read these instructions carefully. It is designed to familiarise you with the product's many features and to ensure that you get the very best from your purchase.

Safety

To ensure your safety and the safety of others, please ensure you read the Safety Instructions before you use this product.

Disposal

Please ensure the product and its accessories are disposed in compliance with WEEE (Waste Electrical and Electronic Equipment) Directive and other regulations. Please check with your local authority for disposal regulations.

Customer Service:

If you need help, please contact our Customer Service:
Telephone: +44 (0) 845 250 0586
Email: service@augustint.com

Quick Start Guide

DTV700B

1. It is suggested that you use a roof top aerial when scanning for TV channels for the first time. If any signal is detected, the channel information will be saved onto the TV, you may then switch back to the portable antenna supplied and change your location to find the best place to receive the signal.

2. Connect the device to the mains power or use the built-in battery, press and hold POWER on the device for 3 seconds to turn it on.

3. When turning on the device for the first time, "Installation" will show, follow the instructions to select Country and OSD Language, then press <OK>, the auto search will then start. Once the search has finished, press <▲> or <▼> to select channels. Press <OK> to open the Sub Menu and select TV/Radio to switch between Freeview TV and Radio channels.

4. If you have done the first time installation before, and would like to search for Digital Freeview channels again, or if you have moved to a different region and need to scan channels again, press MENU, select "Installation", choose the Scan Mode, press <OK> to start the search. Once the search has finished, press <▲> or <▼> to select channels. Press <OK> to open the Sub Menu and select TV/Radio to switch between Freeview TV and Radio channels.

5. To play video, music, photos or PVR on a SD/MMC card or memory stick, insert the card or memory stick to the card slot or USB port, press MENU to select Multimedia, then select "Music", "Photo", "Movie" or "PVR", press <OK> to enter the list, or press <AUDIO>, <PHOTO> or <VIDEO> on the remote to enter music, photo or movie list. Select a file and press <OK> to Play.

6. Please note the included portable antenna may only be used in areas where signal is very strong. As mentioned on the Freeview website, only some households might be able to use a set top aerial at present. This only applies if you live in an area with coverage close to a transmitter, but reception would still be unreliable and they strongly recommend that you use a roof top aerial for good reception.

   The reception will improve along with the progress of the Digital Switchover Program. Reception may also be affected by various factors such as how close you are to transmitters, tall buildings, thick walls, ceilings and weather etc.

7. For any further queries, please telephone August International Ltd helpline (0) 845 250 0586 or email service@augustint.com

Contents

1. Safety Instructions 1

2. Accessories 3

3. Part Names and Functions 4

4. Connection 9

5. Unit Operation 10

6. Recharge the Battery 38

7. Specifications 39

8. Troubleshooting 40

9. Warranty 41

1. Safety Instructions

Storage and Use

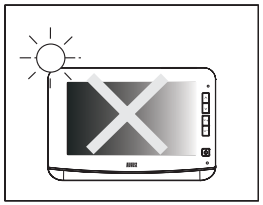

Keep this machine away from hot or cold places. Working temperature of this device is 0° C ~ 50° C, storage temperature is -10° C ~ 60° C.

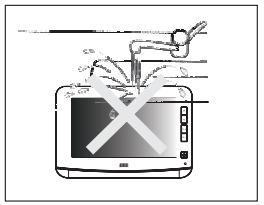

Keep the TV set away from water or damp environment.

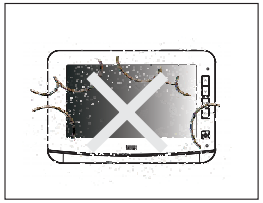

Never expose the TV set to moisture,dust oil or smoke.

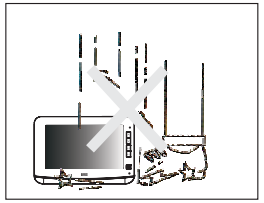

Avoid dropping or exposing to impacts.

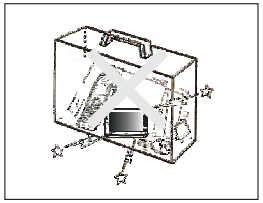

Never put this machine in containers that are unstable as this may cause damage.

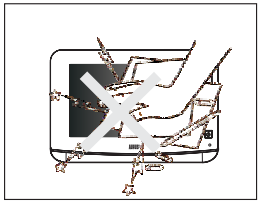

Never extrude or chafe this machine with sharp objects.

Maintenance

Please unplug all connection wires before start cleaning this machine.

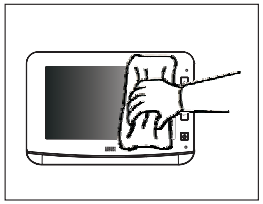

Please wipe the display screen and buttons with a softcloth. Only clean the screen with professional LCD TV screen cleanser.

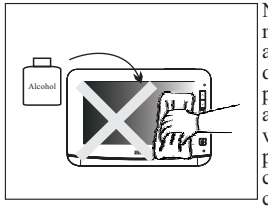

Never wipe this machine with an abrasive cloth, detergent powder, alcohol and benzene etc. various propellants or chemical cleaning products.

Operation Precautions

1.Use only the supplied power adaptor with this device. Failure to do so can cause damage to the device and risk personal injury.

2.For the sake of safety, when you do not intend to use the display, please switch off the AC adaptor or car adaptor.

Earphone Operation Precautions

1.Please do not tune your headphone / earphone at high volumes, otherwise, it may lead to ear damage.

2.For open-designed earphone, to avoid annoying those close by, please tune down the volume.

3.In case of any tinnitus, please turn down the volume or stop using this machine.

4.It is recommended by aurists that the earphones should not be used continuously for a prolonged period.

⚠ Warning

For the sake of safety for yourself and others, please do not watch the TV while driving.

⚠ Special Notice

A few highlights or dark spots may appear on the LCD screen. It is a very common phenomenon of active matrix display technology, and does not mean any defects or faults. Never try to repair this machine by yourself. In case of any fault or failure, please turn off the display at once, and notify our Company or the corresponding dealer. The display is made up of many precision electronic components. Any disassembly or modification may lead to further damage.

2. Accessories

AC/DC adaptor

Remote control

TV Aerial

Earphones

User manual

3. Part Names and Functions

3.1 Front

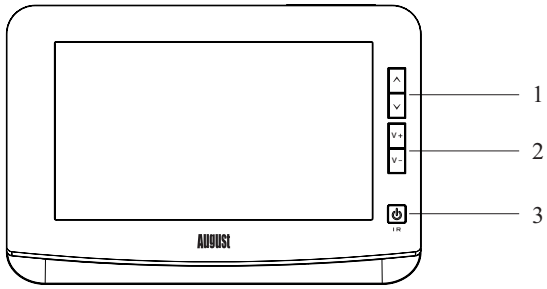

1. CH+/CH- button: menu / channel selection
2. Volume+/- button: increase / reduce volume
3. Power button: Press and hold the button for 3 seconds to switch on the device, press the button to switch off the device

3.2 Back

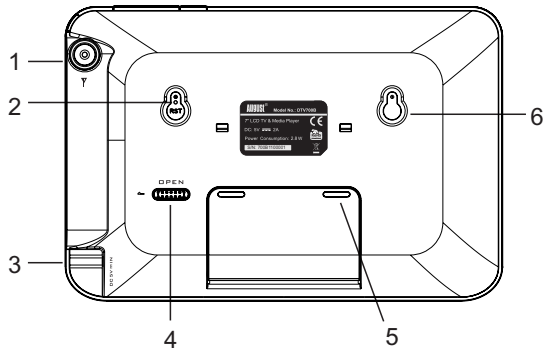

1. Coaxial Aerial Socket
2. Reset
3. DC-IN Socket
4. Table Stand Lock Switch
5. Table Stand
6. Mounting Bracket Holes

3.3 Top

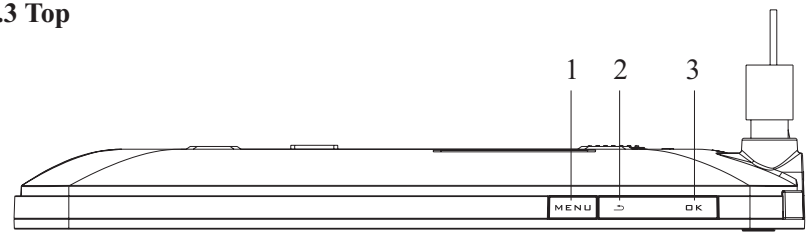

1. MENU Menu button
2. ⮌ Return button
3. OK OK button

3.4 Left Side

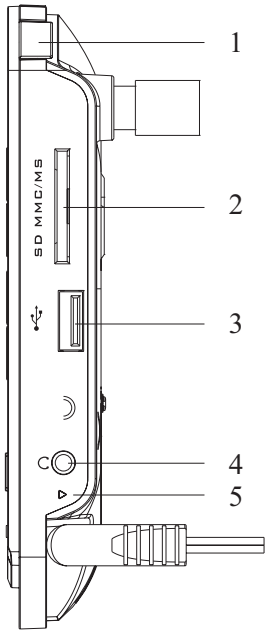

1. Telescopic Antenna
2. SD/MMC/MS Card Slot
3. USB Port
4. Headphone Socket
5. Power Indicator:
Indicator lights when the power adaptor is plugged in; Red whilst the battery is charging and green once the battery is fully charged.

3.5 Remote Control

3.5.1 Remote Button Functions

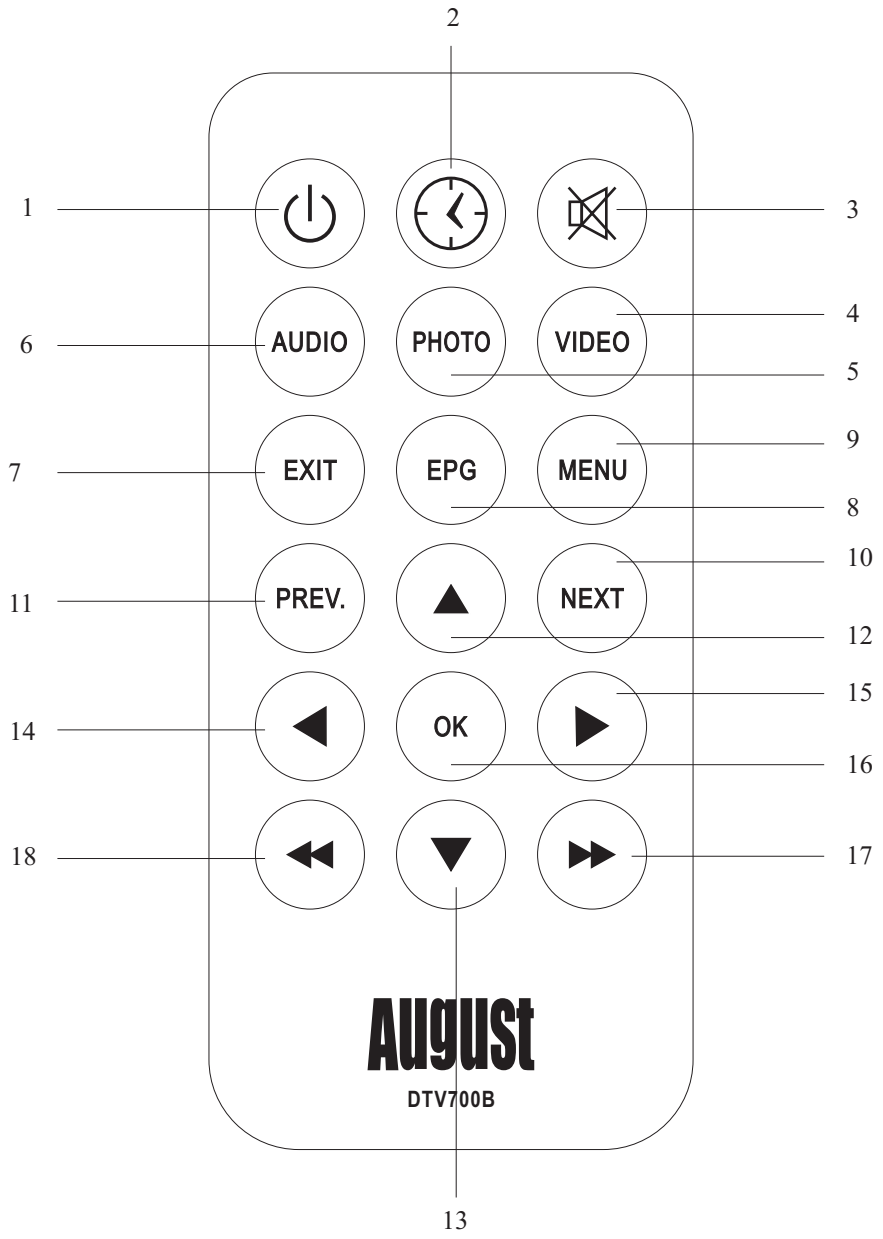

1. ⏻ Power off *

2. Egg timer function

3. Mute or unmute

4. VIDEO Video mode

5. PHOTO Photo mode

6. AUDIO Music mode

7. EXIT Exit

8. EPG Electronic Program Guide

9. MENU Menu

10. NEXT Next track in Music Player mode

11. PREV. Previous track in Music Player mode

12. ▲ Up / Channel up

13. ▼ Down / Channel down

14. ◀ Left / Volume down

15. ▶ Right / Volume up

16. OK OK / Confirm selection

17. ▶▶ Fast forward a track or video

18. ◀◀ Fast rewind a track or video

* Please note that the device can be switched off using the POWER button on the TV or Power Off on the remote, it can only be switched on using the POWER button on the TV.

3.5.2 Use of the Remote Control

Please remove the PVC packaging before using the remote control for the first time.

1.Do not expose the remote control to direct sunlight or very strong/bright light.

2.Do not drop or step on the remote control or subject it to shocks.

3.Keep the remote control away from extreme hot or humid environment.

4.Keep the remote control away from water.

■ Operating range

1.It may not be possible to operate the device if there are obstacles between the remote sensor and device sensor.

2.Use the remote control no further than 5 meters away from the sensor on the TV.

3.The receiving angle range should be ± 30°.

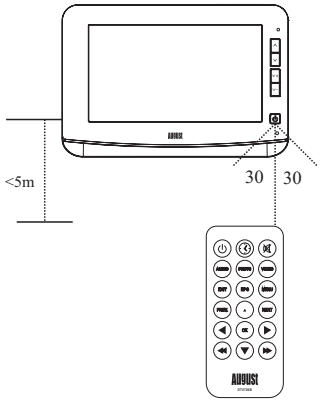

■ Replacing the battery

If the remote control does not function or if the operating range becomes reduced, replace the old battery with a new one.

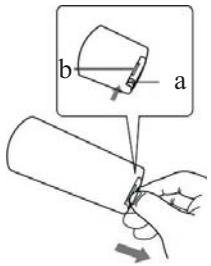

Remove the old battery, then insert the new battery into the battery holder with the + side facing upwards.

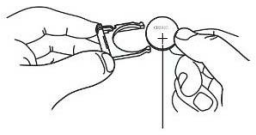

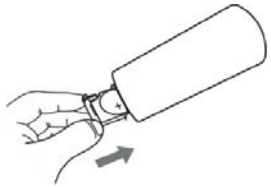

Push back the holder.

***Note:**

1.Please ensure proper disposal of used batteries.

2.To prevent leakage of fluid from the lithium battery, remove the battery when not using the remote control for a long period of time. If the battery leaks fluid, carefully wipe it out of the battery case, then change to a new lithium battery.

4. Connection

4.1 Connecting the power supply

1.Connect the DC output of the AC/DC adaptor to the DC IN 5V socket on the device.

2.Plug the power adaptor to the AC power socket.

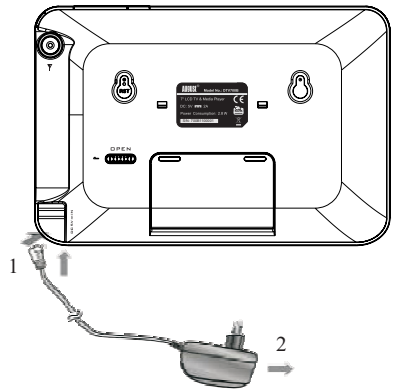

4.2 Connecting the earphones

Connect the earphone plug to the headphone socket on the device.

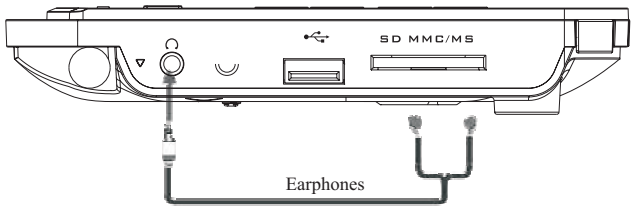

***Note:**

If earphones are used, sound is only transmitted through the earphones, and no sound is available from the stereo speakers of the device.

5. Unit Operation

5.1 Initial Installation

After you first switch-on your device, an easy installation menu is displayed that allows you to set your location preferences and scan for channels:

Item	Description
Country	Press <◄> or <►> to select country
OSD Language	Press <◄> or <►> to select On Screen Display language
Time Zone	Press <◄> or <►> to select Time zone
Summer Time	Press <◄> or <►> to adjust daylight saving time setting
LCN	Press <◄> or <►> to adjust Logical Channel Number Settings
Scan Mode	Press <◄> or <►> to select scan mode
Antenna Power	The device can output 5V power from the coaxial aerial socket, press <◄> or <►> to select Antenna Power ON if your external aerial takes 5V input via its coaxial plug.

Key	Function
<▲><▼>	Navigate up and down
<◄><►>	Set a specific option
<EXIT>	Save and return to Main Menu
<OK>	Confirm to start the scan

5.2 Channel Scan

5.2.1 Auto Scan

In the Installation menu select Auto as the scan mode then press <OK> to start an automatic channel search.

After the scan has finished, you can start watching any channels which have been found. If no channels are found, select YES to scan again or NO to return to the installation window.

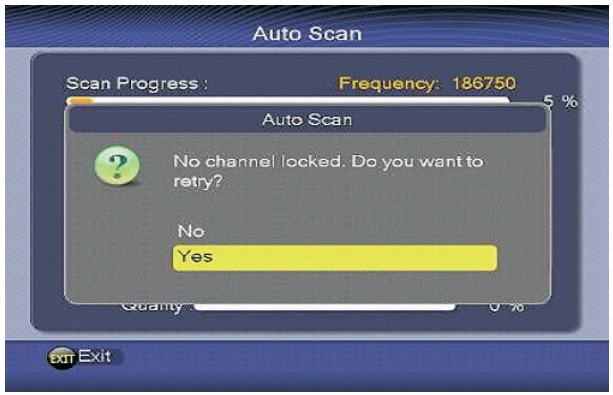

Key	Function
<EXIT>	During a scan, if channels have already been found, you can press <EXIT> to abort the rest of the scan and begin watching the found channels.

5.2.2. Manual Scan

In the Installation window, select Manual as the scan mode and press <OK> to begin a Manual Scan.

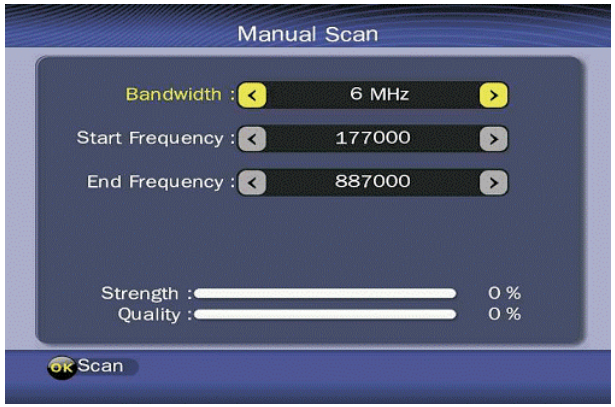

Item	Description
Bandwidth	Press <◀> or <▶> to modify bandwidth values
Start Frequency	Press <◀> or <▶> to modify start frequency values
End Frequency	Press <◀> or <▶> to modify end frequency values

Key	Function
<▲><▼>	Navigate up and down
<◀><▶>	Modify values
<OK>	Confirm to start the scan

5.3 TV/Radio Operation

After you switch the device on, it will automatically return to playing the channel which was active before the device was turned off. If no channels are saved in the memory, it will display the installation menu allowing you to rescan. To open up the Main Menu at any time, you can press the MENU button.

Key	Function
<▲><▼>	Navigate menu items
<◀><▶>	Navigate menu items
<OK>	Confirm choice
<EXIT>	Return to TV/Radio

For more settings, pressing <OK> whilst watching TV or Radio will bring up a sub menu.

TV Sub Menu Function List:

Channel List	Info	TV/Radio	Audio
Subtitle	Teletext *	EPG	Favorite
Record	Zoom In	Time Shift	

* Note: The Teletext function is not available for the UK.

Radio Sub Menu Function List:

Channel List	TV/Radio	Audio
EPG	Favorite	

5.3.1. TV Channel List

To access the TV Channel List, press <OK> to display the TV Sub Menu and then select the TV Channel List option. The channel list shows a list of all the channels found during the last channel scan.

Use the <▲> and <▼> to navigate through the channel list and press <OK> to switch to the selected channel.

Press <EXIT> to leave the channel list and return to the channel you were watching.

Key	Function
<OK>	Display TV Sub Menu and confirm the choice
<▲><▼>	Navigate through the Channel List
<EXIT>	Leave Channel List window

5.3.2. Channel Information

Press <▲> or <▼> to change the channel up or down. After changing the channel, an information screen will be displayed. Press <OK> to switch between channel information and program information of the current channel. To access these information screens without changing the channel, you can select “Info” from the Sub Menu.

Press <◄> or <►> to decrease or increase the volume.

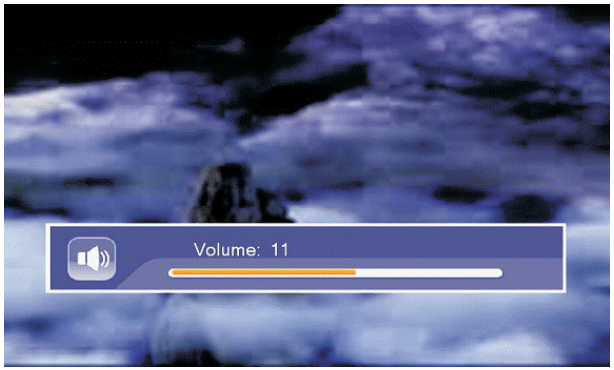

Key	Function
<▲><▼>	Switch channels
<◄><►>	Decrease or increase volume
<◄◄><►►>	Jump to the first or last channel
<OK>	Display Sub Menu and confirm the choice

5.3.3. Radio

To access radio stations, press the <OK> to display the Sub Menu and select TV/Radio to swap between watching TV and listening to the Radio. Pressing <▲> and <▼> will switch between radio channels.

Press <◄> or <►> to decrease or increase volume.

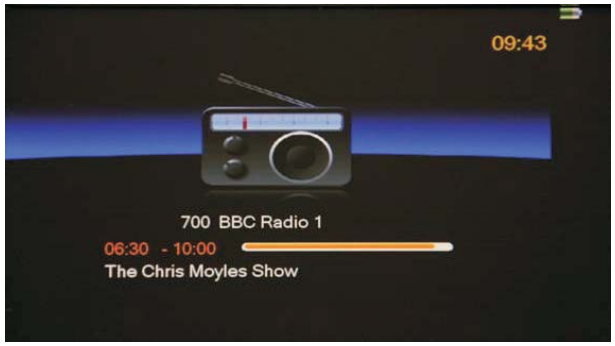

Key	Function
<▲><▼>	Switch channels
<◄><►>	Decrease or increase volume
<OK>	Display Sub Menu and confirm the choice
<EXIT>	Exit radio and switch to TV mode

5.3.4. Audio

Some channels occasionally contain multiple sound tracks. You can use the audio setting to select different audio modes and languages. Access the Sub Menu by pressing <OK> then select Audio to display the Audio settings window.

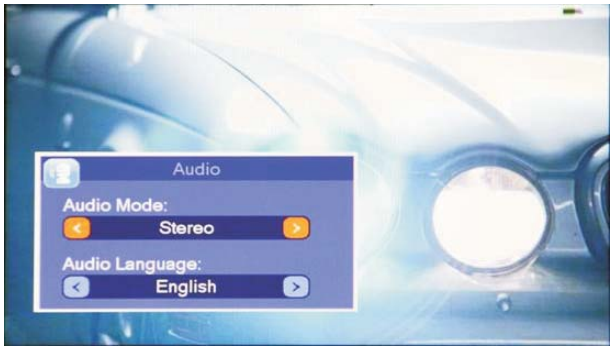

Key	Function
<▲><▼>	Select setting items
<◀><▶>	Modify setting
<OK>	Save audio setting and return to TV
<EXIT>	Close Audio setting window

5.3.5. Subtitle or Teletext

In order to access Teletext or turn on subtitle, press <OK> to display the Sub Menu then choose Subtitle or Teletext to display the Subtitle or Teletext setting windows.

Key	Function
<◀><▶>	Select language
<OK>	Save language settings and return to TV
<EXIT>	Close language settings window

* Note: The Teletext function is not available for the UK.

5.3.6. Electronic Program Guide (EPG)

To access the EPG, whilst watching TV, press the <OK> key to open the Sub Menu then select the EPG function. The EPG provides a schedule and overview of all programs to be broadcast in the coming 12 days. Please note that not every channel offers EPG services and detailed program descriptions.

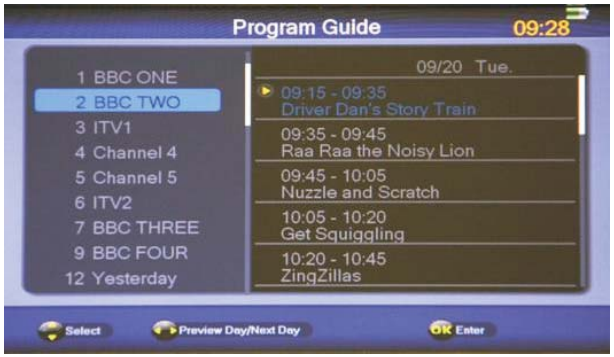

Key	Function
<▲><▼>	Select channels / programs
<◀>	View the program list of the previous day
<▶>	View the program list of the next day
<EXIT>	Return to TV playing
<OK>	View a detailed description of the program

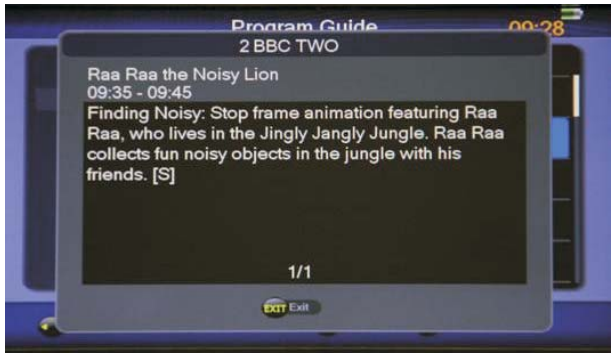

5.3.7. Favourite Channels

To access the list of your favourite channels, press the <OK> to open the Sub Menu and select <FAV> from the options. Use <▲> and <▼> to scroll through your list and <OK> to tune into the channel you want to watch.
(see 5.5. Channel Manager for setting channel lists)

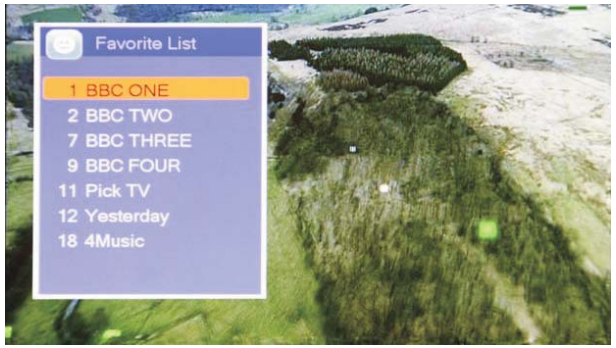

Key	Function
<▲><▼>	Switch to the desired channel
<OK>	Confirm the choice
<EXIT>	Close the Favorite List window

5.3.8. Instant Recording

Requires an external storage device to be connected, such as a USB memory stick, SD card or USB hard disk.

To record the program that you are watching, press <OK> to access the Sub Menu, then select the RECORD function. This starts the recording of the currently active channel. To finish recording, press either <EXIT> or <OK>. Whilst recording, most of the TV's functions are disabled, you will only be able to adjust the volume and cancel recording. The format of the recorded file is .ts.

Key	Function
<OK>	Start to record or stop recording
<EXIT>	Stop recording

5.3.9. Zoom In

To zoom in on the picture, press <OK> to access the Sub Menu then select Zoom In from the options to enable the Zoom-in mode.

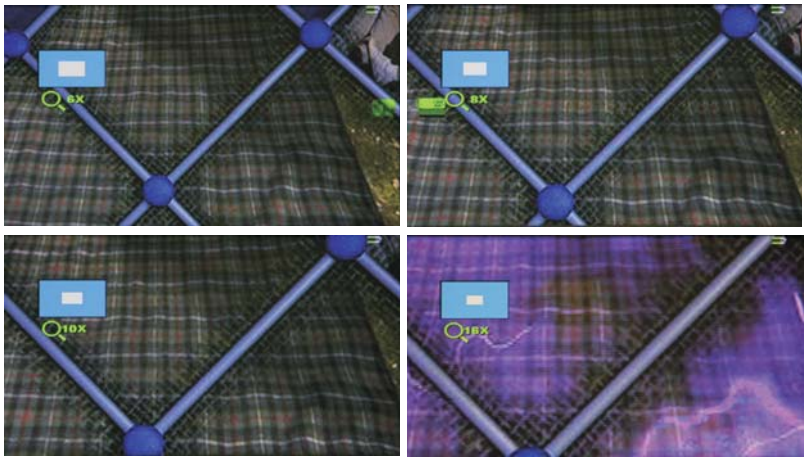

Key	Function
<▲><▼>	Move the frame up or down
<◀><▶>	Move the frame left or right
<OK>	Change magnifier (x2, x4, x6, x8, x10, x16)
<EXIT>	Return to original size

5.3.10. Time Shift

Requires an external storage device to be connected, such as a USB memory stick, SD card or USB hard disk.

To activate the Time Shift function, press <OK> to access the Sub Menu, and select Time Shift. When the time-shift function is activated, your device automatically starts recording the program that is being played and temporarily stores the content in a time-shift buffer (please see session 5.8.3 about how to change buffer size). This function enables you to pause a live TV program at

any time and continue watching it later on, or instantly rewind and watch what you missed. Please note that your previous time-shift content is discarded after you change the channel. To permanently record the program that you're watching choose the Record function in Sub Menu, If you do this whilst in time shift mode, a system message will pop up to confirm that you want to deactivate time-shift function in order to start recording.

Key	Function
<◄><►>	Jump through time shift status bar by chapter. Each chapter's duration is 5 min.
<EXIT>	Return to live TV
<OK>	Play / pause

5.4 Media Player

Press <Menu> to display Main Menu window.

You can access multimedia functions such as Music Player, Photo Viewer, Video Player and PVR by selecting Multimedia in Main Menu. Multimedia content can be played from either an SD card or a USB storage device.

Key	Function
<▲><▼>	Navigate through multimedia items
<OK>	Confirm your choice
<EXIT>	Return to Main Menu

5.4.1. Music

The device supports music formats: MP3 and WMA. See session 7.Specifications for more details.

A track list displays when you enter a folder containing music files. Press <▲> or <▼> to select a song and press the <OK> to play it.

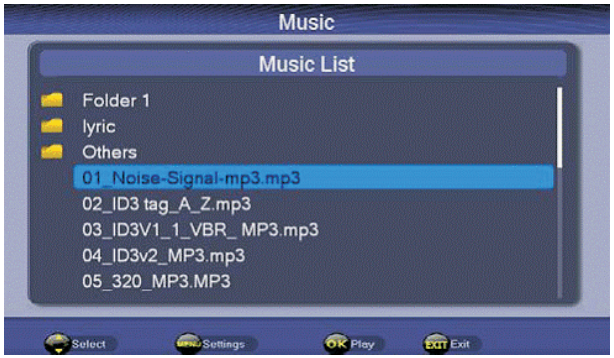

Key	Function
<▲><▼>	Navigate through the music list
<◄><►>	Decrease or increase volume
<MENU>	Enter Music Settings
<OK>	Play
<EXIT>	Return to Multimedia window

Pressing the <Menu> opens the Music Settings screen to change the play mode and adjust the sound equalizer.

Item	Description
Play Mode	Set play mode to repeat all or repeat once
EQ	Adjust sound effects

Key	Function
<▲><▼>	Select setting items
<◄><►>	Adjust setting
<OK>	Save current setting
<EXIT>	Return to Music window

Music playing:

Key	Function
<▲><▼>	Rewind / Foward
<◄◄><►►>	Rewind / Foward
<◄><►>	Decrease or increase volume
PREV / NEXT	Jump to previous song or next song
<OK>	Play / Pause
<EXIT>	Return to Music List

5.4.2. Photo

The device supports photo formats: JPEG and BMP. See session 7.Specifications for more details.

The photo viewer offers three operation modes: Thumbnail mode, Browser mode and Slideshow mode.

Thumbnail mode:

Key	Function
<▲><▼><◄><►>	Select photo / subfolder
<OK>	View the current photo in Browser mode or to browse a folder
<MENU>	Set background music list
<EXIT>	Exit the menu / setting

In Thumbnail mode, press <MENU> to enter Music Settings and set the background music list. In Music Settings, use <▲><▼>to select a song in Music List window, then press <OK> to add it onto Play List. To remove a song from the Play List, press <►> to activate the Play List window, and use <▲><▼> to select a song in Play List then press <OK> to confirm. The music files in Play List will be played automatically once the settings have been saved and exit to the Thumbnail mode.

Key	Function
<▲><▼>	Select music
<OK>	Add or remove songs in Play List
<MENU>	Save and go back to the previous folder in Music List window
<EXIT>	Return to Thumbnail

Browser mode:

Key	Function
PREV/NEXT	View previous / next photo
<◄◄><►►>	Zoom in / Zoom out
<◄><►><▲><▼>	Rotate photo
<OK>	Enable Slideshow mode
<EXIT>	Return to Thumbnail

Slideshow mode:

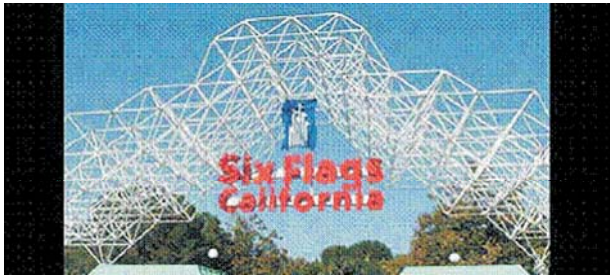

In Slideshow mode, the pictures will be played automatically, press <OK> to pause or resume the show.

Key	Function
<◄><►>	Decrease / increase volume
<▲><▼>	Return to Browser mode
<MENU>	Enter Slideshow setting
<OK>	Pause / Resume / Confirm the setting
<EXIT>	Return to Browser mode

Press <MENU> to enter Slideshow setting and set the photo's playback intervals, it can be set as 3, 5, 10, or 30mins, press <◄><►> to change the time, then press <OK> to confirm and close the setting window.

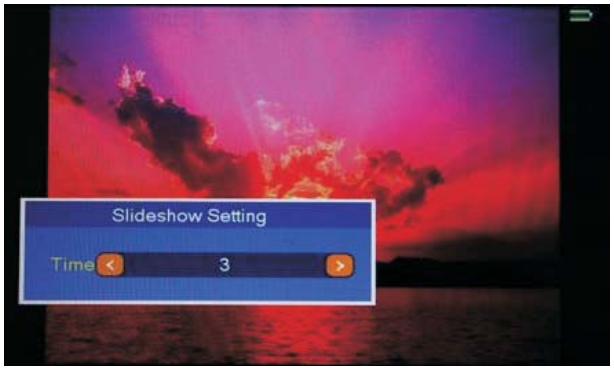

Press <◄><►> to adjust the volume of the music if the Play List has been set up.

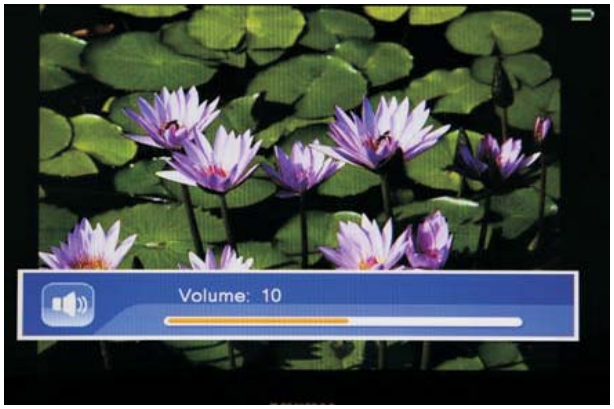

Press <EXIT>, <▲> or <▼> to exit the Slideshow and return to Browser mode.

5.4.3. Movie

You can use the Movie player to play your video files from an SD card or a USB storage device. The supported formats are listed in the following table (see session 7.Specifications for more details).

MPEG1	avi,dat
MPEG2	vob, ts, tp, trp, avi, mpg
MPEG4 SP	mp4, mov, 3gp
MPEG4 ASP	divx , xvid, mp4, mov, avi
H.263	mov, 3gp
H.264	mkv, ts, avi

A movie list displays for you to select desired video file. Press the <OK> to start playing the selected video.

Key	Function
<▲><▼>	Move up and down to select video
<◀><▶>	Preview the selected video in the small window on the right
<OK>	Play selected video or Pause
<EXIT>	Return to Multimedia window

Whilst a video file is playing, pressing the <Menu> will display the Movie Status Bar for 4 seconds.

Key	Function
<MENU>	Press <MENU> to display Movie Status bar
<OK>	Play / Pause
<◀><▶>	Rewind / Forward
<◀◀><▶▶>	Rewind / Forward
<EXIT>	Return to Movie List

5.4.4. PVR

You can use the PVR function to play TV shows that you have recorded earlier. From the Main Menu select Multimedia then PVR, press <OK> to enter the PVR window, a video list displays for you to select desired video file.
Press <▲><▼> to navigate through the video list, press <OK> to start watching the video in full screen.

Key	Function
<▲><▼>	Navigate through video list
<OK>	Play selected video
<MENU>	Delete selected video
<◀><▶>	Preview the selected video in the small window on the right
<EXIT>	Return to Multimedia Menu

During video playback, press <Menu> to display the Movie Status Bar. It will disappear after showing for 4 seconds.

Key	Function
<MENU>	Display Movie Status bar
<OK>	Play / Pause
<◀><▶>	Rewind / Forward
<◀◀><▶▶>	Rewind / Forward
<EXIT>	Return to PVR Program List

5.5 Channel Manager

Channel Manager is used to rearrange the channel sequence, remove channels and set favorite TV and radio channels.

Press <◀> or <▶> to move to the desired channel manager functions.

Key	Function
<▲><▼>	Select channel or move channel
<◀><▶>	Move to the desired channel manager functions such as to rearrange channel sequence, remove channels, or set favorite channels.
<OK>	Enter or select
<MENU>	Switch between TV and Radio channels
<EXIT>	Return to Main Menu

5.6. Installation

If you have completed the initial installation before, and would like to search for digital channels again, then press Menu, select Installation and follow the instructions on sessions 5.1 and 5.2 to scan channels.

If you have moved to a different region, or your local digital TV frequencies have been updated and require a retune, set the device to Factory Default (see session 5.9.3), then press Menu, select Installation and follow the instructions on sessions 5.1 and 5.2 to scan channels.

5.7. Timer Manager

You can find all timer related settings in the Timer Manager Window such as Sleep Timer and Egg Timer.

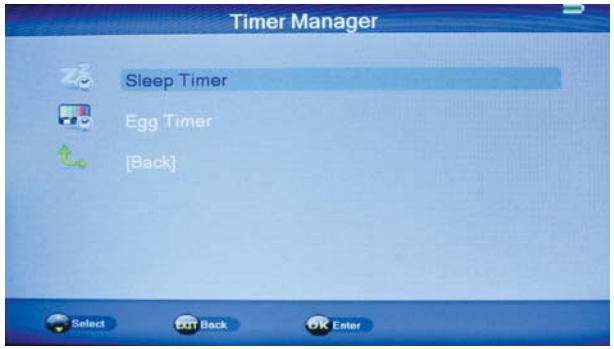

Key	Function
<▲><▼>	Select setting items
<OK>	Confirm the choice
<EXIT>	Return to Main Menu

5.7.1. Sleep Timer

You can use the Sleep Timer to set when the device powers down automatically. There are six options, AUTO, 30 min, 60 min, 90 min, 120 min and OFF.

Key	Function
<◀><▶>	Adjust setting
<OK>	Save current setting and return to Timer Manager window
<EXIT>	Return to Timer Manager Window

5.7.2. Egg Timer

You can use Egg Timer to set an alarm clock. The timer can be set as 2 min, 5 min, 10 min, 15 min, 20 min, 30 min, 45 min, 1 hour, 1 hour 30 or 2 hours.

Key	Function
<◀><▶>	Adjust setting
<OK>	Save current setting and return to Timer Manager Window
<EXIT>	Return to Timer Manager Window

After setting up the Egg Timer, there is a red countdown in the top right corner of the screen. When time's up, there is alarm with a message. Press <EXIT> to stop the alarm and close the message window.

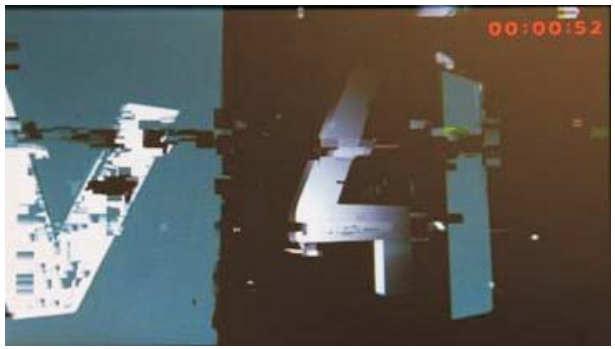

If you want to cancel the Egg Timer, enter the Egg Timer Window and press <EXIT>.

5.8. Settings

You can find all TV related settings in the Settings window such as Language Preference, System Preference and Recording Settings.

Key	Function
<▲><▼>	Select setting items
<OK>	Confirm the choice
<EXIT>	Return to Main Menu

5.8.1. Language Preference

You can use the Language Settings to set the EPG language, audio language and subtitle language.

Key	Function
<▲><▼>	Select setting items
<◀><▶>	Adjust setting
<OK>	Save current setting and return to Settings Window
<EXIT>	Return to Settings Window

5.8.2. System Preference

Press <▲> or <▼> to select the display setting item and <◀> or <▶> to adjust the setting.

Item	Description
Aspect ratio	Auto / 16:9 Full Scan / 16:9 Pillar box / 4:3 Letter box / 4:3 Pan & Scan
Contrast	1~10
Brightness	1~10
Hue	1~10

Key	Function
<▲><▼>	Select setting items
<◀><▶>	Adjust setting
<OK>	Save current setting and return to Settings Window
<EXIT>	Return to Settings Window

5.8.3. Recording Settings

Recording settings is provided to set the options for Time shift function and the duration of instant recording. Recording Target specifies the storage device that your recorded files are saved to. If your desired recording target is not available, the file will be stored in any other available storage device instead.

Item	Description
Timeshift Function	Turn on or turn off timeshift function
Timeshift Storage	Adjust timeshift buffer size (1G, 1.5G, 2G, 2.5G, 3G, 3.5G, 4G)
Recording Duration	Instant recording duration (0.5, 1, 1.5, 2, 2.5, 3, 3.5, 4, 4.5, 5, 5.5, 6, 6.5, 7, 7.5, 8Hr)
Recording Target	Set the recording target device (USB, SD / MS)

Key	Function
<▲><▼>	Select setting items
<◀><▶>	Adjust setting
<OK>	Save current setting and return to Settings Window
<EXIT>	Return to Settings Window

5.9. Tools

You can use Tools to manage Storage Devices, Upgrade Software, Factory Reset and Software Information.

Key	Function
<▲><▼>	Select items
<OK>	Confirm your choice
<EXIT>	Return to Main Menu

5.9.1. Storage Manager

Storage Manager provides information about the current storage devices connected to your device.

Key	Function
<▲><▼>	Select storage device
<EXIT>	Return to Tools window

5.9.2. Software Upgrade

This function is for manufacturer use only.

5.9.3. Factory Reset

The default settings can be restored by Factory Reset.

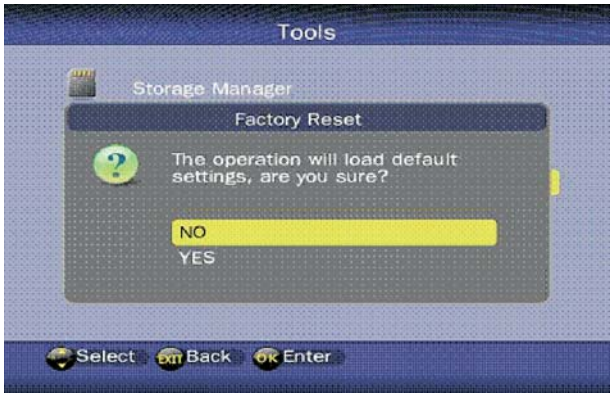

Key	Function
<▲><▼>	Select NO or YES
<OK>	Confirm your choice
<EXIT>	Return to Tools window

5.9.4. Software Information

Software Information shows the current version of the software on the device.

Key	Function
<EXIT>	Return to Tools window

6. Recharge the Battery

Connect the mains adaptor to the DC In socket on the TV.
During charging, a green battery indicator will show in the top right hand corner of the screen. Once the battery is fully charged, this icon will disappear.
To check the charging status without turning the screen on, the power indicator lights red during charge and green once the device has finished charging.
When the battery is low, a message is displayed on the screen warning that the TV will soon automatically switch itself off.

7. Specifications

LCD Display	Screen Size: 7 Inch Resolution: 800 x 480 pixels Aspect Ratio: 16:9 Brightness: 220 cd/m^2 Contrast: 300:1
Decode Standard	DVB-T MPEG1/2/4 H.263 H.264
DVB-T Band Width	6, 7, 8 MHz
DVB-T Frequency	VHF: 177.5~226.5 MHz UHF: 474~858 MHz
RF Antenna Jack	Impedance: 75ohm Output: 5V 50mA
Card Reader	Support SD/MMC card up to 8GB
USB Port	USB 2.0 host (5v, 800mA)
Built-in Speaker	2 x1.5W, 8 ohm
Power Adaptor	AC 100~240V 50~60 Hz DC 5V/2A
Built-in Battery	3.7V 2200mAh rechargeable battery
Power Consumption	≤2.8W
Dimensions	202x136x20.4 mm
Net Weight	441g

Media Formats

Video Player	File Type	AVI, MPG, VOB
	Video Type	MPEG1, MPEG2, MPEG4
	Audio Type	MPEG1/2, Layer 1/2/3, AC-3
	Audio bit Ratio	32Kbps ~ 320Kbps
	Resolution	Max. 800 x 480
	Frame Rate	Max. 30fps/25fps(PAL)
	Caption	DIVX(4.0, 5.0), XVID
Music Player	File Type	MP3,WMA
	Bit Ratio	32Kbps~320Kbps
Photo Viewer	File Type	BMP, JPEG
	Resolution	Up to 16376 x 16376 pixels

8. Troubleshooting

Problems listed below do not necessarily signify a fault with the unit.
Please check this list before requesting repairs.

Problems	Possible Causes and Solutions
No picture and no sound	Check the connection with the AC adaptor or car adaptor. Use of an unauthorized power supply. Press and hold the power button on the device for 3 seconds to turn on the device.
No image	Check the channel selection. Scan for channels again. Always rescan for channels in new locations.
No sound	Check the sound volume. If you are using earphones, test them on another item. Check the earphone cable is plugged into the earphone socket on the device. Set the device to factory default, then try again.
Picture freezing, and/or sound distorting	Signal too weak, please check the aerial. Try to use a proper roof top aerial or an amplified aerial.
No signal	Signal too weak, please check the aerial. Try to use a proper roof top aerial or an amplified aerial.
Dark picture	Please adjust Brightness and/or Contrast settings.
Snowstorm	Motors/Trains/High Voltage Lines and Neon Lights may affect the signal.
Achromatic/ flashing/ no colour	Please adjust the Colour Setting.

⚠ Warning

This operation instruction is only intended for reference. No further notice is available to any modification of all information contained therein. Due to continuing improvements, the features and design are subject to change without notice.

⚠ Warning

No user serviceable components are fitted inside this TV. Do not attempt any repairs, as this will invalidate the warranty. Any repairs must be carried out by either the manufacturer or their nominated service centre. Parts inside this set are subject to high voltage.

9. Warranty

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased
- The product must be correctly installed and operated in accordance with the instructions given in the user's manual.
- The product must be used solely for domestic purposes.
- The warranty only covers the main unit, and does not cover the accessories.
- The warranty does not cover the damage caused by misuse, negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repairs. The manufacturer disclaims any liability for incidental or consequential damages.
- Please consult our customer service before returning any product; we are not responsible for any unexpected product returns.
- Any faulty products must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Please note:

1.A LCD display panel comprises a very large number of pixels and each pixel contains three sub-pixels - red, green and blue. Due to the complex manufacturing process, occasional pixel anomalies may occur. Pixel anomalies cannot be fixed or repaired and can happen at any stage in the LCD's life. August products should not be deemed as faulty if there are no more than three bright and dark pixels respectively.

2.Portable TV antennas included in the box are for people to watch Freeview TV in areas where the signal is very strong and there may be difficulties in receiving signal with the included portable antennas in some regions at present. This is due to the fact that Freeview is yet to operate in full power in the UK. August TVs should not be deemed as faulty if it can receive Freeview by connecting to a proper digital rooftop aerial.

Customer Service:

Telephone: +44 (0) 845 250 0586
Email: service@augustint.com